



# **Installation and Playing instructions**

# Style Box 1

www.boehm-organs.com

Style Box 1 for SEMPRA 2.0 – installation and playing instructions

Version 1.00, 09.12.2021 Art.-Nr. 42395AE

The information contained in this documentation may be changed without announcement and are subject to change without notice by Keyswerk Musikelektronik GmbH & Co. KG does not represent an obligation.

The description contains the current state of information at the time of going to press.

Changes of technical details compared to the descriptions, the information and illustrations in this manual are subject to change without notice.

Keyswerk Musikelektronik GmbH assumes no liability for program errors and for incorrect information in the documentation and its consequences.

© Keyswerk 2021 All rights reserved

Responsible for the content of this website **KEYSWERK Music Electronics GmbH** Warbersche Str. 32 31675 Bückeburg Germany

Phone: 05722 - 905088 Fax: 05722 - 287555

Internet http://www.keyswerk.de

E-mail info@keyswerk.de

# **Content**

General	4
Installation	4
How to find the Style Box data?	5
Overview STYLE BOX 1	6
STYLES	6
SONGS	7

### General

**STYLE BOX** is the new style series for all Böhm-SEMPRA 2.0 organs and keyboards.

Each set of this series contains at least 15 styles, each with a specially arranged example SONG, each containing four "one-touch" presets, adapted to the four style variations. Whether traditional swing and fox rhythms, country and Latin styles, soulful ballads or groovy dancefloor beats - the AMADEUS STYLE BOX contains it all.


All rhythms are well-balanced, sound round and powerful and are arranged in a musically sensible and flexible way. It's fun to start playing right away!


A detailed list of the included styles, presets and sounds can be found in the appendix to these installation and playing instructions.

### **Installation**

The data of the Style Box 1 is supplied on the USB stick belonging to your SEMPRA and is installed in the instrument from there:

- Insert the USB stick into one of the USB sockets of your SEMPRA.
- Press the USB button to open the USB menu in the display.
- Tap the Installation data type on the left (the field is displayed in red).
- Place the cursor on the folder
   "59395 Style Box 1" using the data wheel or the up/down cursor buttons (do not open the folder!).
- Tap the "Load/Install folder" field on the right.
- The display asks whether you really want to install the data. Confirm with [Enter].
- The data will now be loaded. You can then exit the USB menu (press the [ESC] key or the [USB] button again).

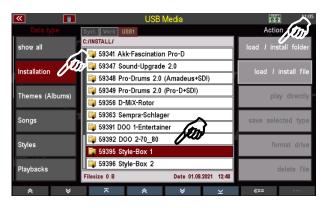

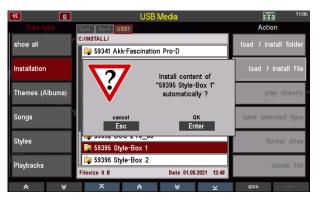

The STYLE BOX 1 data is now loaded and ready to use.

**Caution**: Please note that factory data, including the Style Box, is always installed on an account-specific basis. If you use additional user accounts on your SEMPRA and the Style Box data is also to be used in these accounts, you may have to perform the installation again for these additional accounts!

## How to find the Style Box data?

The **Style Box SONGS** with the one touch presets can be found in the Firm **SONGS bank 12 "St.Bas. Style Box"**. Call up this bank e.g. via the SONG filter button [Bank] (press 2x, if not already selected) and then scroll to the corresponding bank position.




Confirm with [Enter]. The SONG list

on the left side of the display now shows the SONGs of the firm bank 12 (Style Box.  $\,$ 

Alternatively, you can call up the **STYLE BASICS** genre for the SONG list. All Style Box SONGS are assigned to this genre.

To do this, press the SONG filter button **[Genre]** (press 2x if necessary, if not already selected) and select the genre **"Style Basics"** from the list.

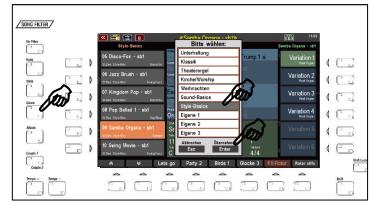

Confirm with **[Enter]**. The SONG list on the left now shows the SONGS of the genre "Style Basics", here among others the Style Box SONGS.

SONGS of the Style Box Packages can be recognized by the abbreviation sb1, sb2... in the SONG name.

The **Style Box STYLES** occupy the Firm Style Bank 12. They are assigned to the corresponding categories and subgroups in the Style selection. Style Box Styles can be recognized in the Style selection by the abbreviation **sb1**, **sb2**... in the style name.



# **Overview STYLE BOX 1**

# **STYLES**

Bank	Number	Name
112	001	Ballad Piano - sb1
112	002	Country Beat fast - sb1
112	003	Dance Hit - sb1
112	004	Disco Chocolate - sb1
112	005	Disco-Fox - sb1
112	006	Jazz Brush - sb1
112	007	Kingdom Pop - sb1
112	008	Pop Ballad 1 - sb1
112	009	Samba Organa - sb1
112	010	Swing Movie - sb1
112	011	Simple Beat - sb1
112	012	Slow String-Waltz - sb1
112	013	Pop Ballad 2 - sb1
112	014	Pop Beat - sb1
112	015	HullyGully - sb1
112	016	Swingin` Easy SB1

# **SONGS**

Bank	Number	Name
112	001	Ballad Piano - sb1
112	002	Country Beat fast - sb1
112	003	Dance Hit - sb1
112	004	Disco Chocolate - sb1
112	005	Disco-Fox - sb1
112	006	Jazz Brush - sb1
112	007	Kingdom Pop - sb1
112	008	Pop Ballad 1 - sb1
112	009	Samba Organa - sb1
112	010	Swing Movie - sb1
112	011	Simple Beat - sb1
112	012	Slow String-Waltz - sb1
112	013	Pop Ballad 2 - sb1
112	014	Pop Beat - sb1
112	015	HullyGully - sb1



Keyswerk Musikelektronik GmbH 32 Warbersche Strasse 31675 Bückeburg Germany

Phone: +49 5722 905088

Internet www. bohm-organs.com E-mail info@boehm-organs.com